


Perkadox 26

Dimyristyl peroxydicarbonate

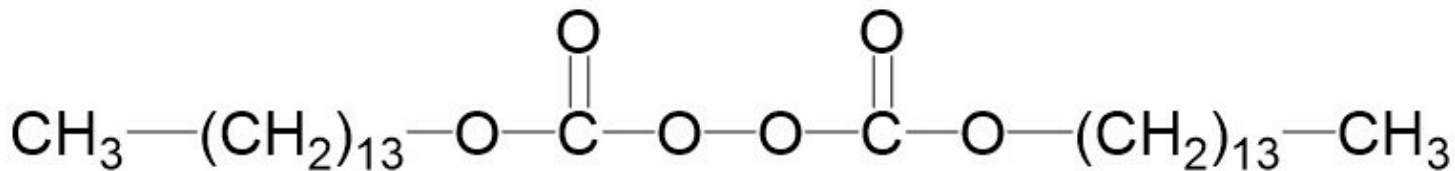

Perkadox® 26 is a peroxydicarbonate for elevated-temperature curing of unsaturated polyester, vinylester, acrylate and methacrylate resins. Perkadox® 26 may be used in combination with other peroxides such as tert-Butyl peroxy-2-ethylhexanoate (Trigonox 21S), tert-Amyl peroxy-2-ethylhexanoate (Trigonox 121-C75), tert-Butyl peroxybenzoate (Trigonox C, or Dilauroyl peroxide (Laurox) to increase cure efficiency. Perkadox® 26 is not suitable for clear casting or coating applications.

CAS number
53220-22-7

EINECS/ELINCS No.
258-436-4

TSCA status
listed on inventory

Molecular weight
514.8

Specifications

Appearance	White flakes
Assay	≥96.0 %
Inorganic + organic hydrolysable chloride	≤ 100 mg/kg

Characteristics

Bulk density	480 kg/m ³
Melting point	42 °C

Applications

Perkadox® 26 can be used for the market segments: polymer production, thermoset composites and acrylics production with their different applications/functions. For more information please check our website and/or contact us.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	35°C (95°C)
Emergency temperature (T _e)	25°C (77°F)
Control temperature (T _c)	20°C (68°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature

Ts max.	15°C (59°F)
---------	-------------

Note When stored under these recommended storage conditions, Perkadox® 26 will remain within the Nouryon specifications for a period of at least 3 months after delivery.

Packaging and transport

The standard packaging is a cardboard box for 25 kg or 4 x 5 kg peroxide. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Perkadox® 26 is classified as Organic peroxide type D; solid, temperature controlled, Division 5. 2; UN 3116.

Safety and handling

Keep containers tightly closed. Store and handle Perkadox® 26 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Dissolving Perkadox® 26 in reactive monomer is not recommended. Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Perkadox® 26. This information should be thoroughly reviewed prior to acceptance of this product. The SDS is available at nouryon.com/sds-search.

Major decomposition products

Carbon dioxide, Tetradecanol

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Perkadox®, Trigonox and Laurox are registered trademarks of Nouryon Functional Chemicals B.V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

The Nouryon logo consists of a stylized blue 'N' followed by the word 'ouryon' in a lowercase, sans-serif font. The 'N' is composed of two overlapping shapes, creating a modern, geometric look.