


Perkadox IPP-NS10

Diisopropyl peroxydicarbonate

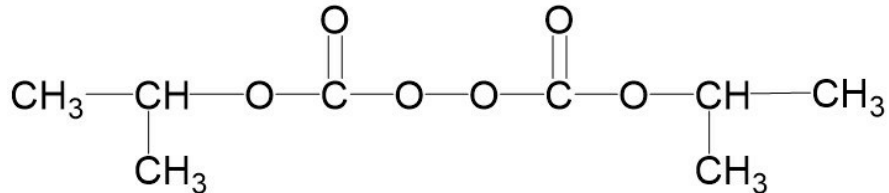

Perkadox® IPP-NS10 is an initiator (10% active ingredient in diethylene glycol di(allyl carbonate)) for (co)polymerization of diethylene glycol di(allyl carbonate) based optical monomers.

CAS number
105-64-6

EINECS/ELINCS No.
203-317-4

TSCA status
listed on inventory

Molecular weight
206.2

Active oxygen content
peroxide
7.76%

Specifications

Active oxygen	0.77-0.78 %
Appearance	Clear liquid
Appearance, 0 to -10°C	Clear liquid
Assay	9.90-10.10 %
Inorganic + organic hydrolysable chloride	≤ 10 mg/kg
Organic hydrolyzable chloride	≤ 5 mg/kg
Viscosity, -10°C	82 mPa.s

Characteristics

Density, -10 °C	1.170 g/cm ³
Viscosity, -10 °C	82 mPa.s

Applications

Perkadox® IPP-NS10 can be used for the polymerization of diethylene glycol di(allylcarbonate) based optical monomers. The use level of Perkadox® IPP-NS10 will depend on the particular cure parameters being used. Approximately 25-30% Perkadox® IPP-NS10 is required. Perkadox® IPP-NS10 offers improved safety and stability characteristics over more concentrated low molecular weight peroxydicarbonate versions.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perkadox® IPP-NS10 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 82°C (180°F)
1 hr	at 64°C (147°F)
10 hr	at 47°C (117°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E _a	124.01 kJ/mole
A	3.35E+15 s ⁻¹
R	8.3142 J/mole-K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	10°C (50°F)
Emergency temperature (T _e)	0°C (32°F)
Control temperature (T _c)	-10°C (14°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T _s Max.	-10°C (14°F) and
T _s Min.	-15°C (5°F)
Note	When stored under these recommended storage conditions, Perkadox® IPP-NS10 will remain within the Nouryon specifications for a period of at least 3 months after delivery.

Packaging and transport

Perkadox® IPP-NS10 is packed in non-returnable, 3.8 l (1 gallon) polyethylene containers of 3.6 kg (8 lb) net weight (4 per case) or in a 18.9 l (5 gallon) Akzopak for 13.6 kg (30 lb) peroxide solution. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Perkadox® IPP-NS10 is classified as Organic peroxide type D; liquid, temperature controlled; Division 5.2; UN 3115; PG II

Safety and handling

Keep containers tightly closed. Store and handle Perkadox® IPP-NS10 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Perkadox® IPP-NS10. This information should be thoroughly reviewed prior to acceptance of this product. The SDS is available at nouryon.com/sds-search.

Major decomposition products

Carbon dioxide, Ethane, Acetaldehyde, Isopropanol, Acetone

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Perkadox®, Nouryset and Akzopak are registered trademarks of Nouryon Chemicals B. V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

The Nouryon logo consists of a stylized blue 'N' followed by the word 'ouryon' in a lowercase, sans-serif font.