


Trigonox 99-C75

Cumyl peroxyneodecanoate, 75% solution in isododecane

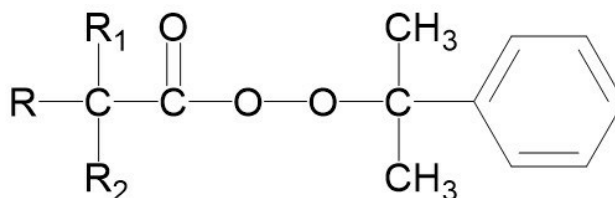

Trigonox® 99-C75 is an initiator (75% active ingredient in isododecane) for (co)polymerization of ethylene, vinyl chloride and vinylidene chloride.

CAS number
26748-47-0

EINECS/ELINCS No.
247-956-7

TSCA status
listed on inventory

Molecular weight
306.4

Active oxygen content
peroxide
5.22%

Specifications

| | |
|---|----------------------|
| Active oxygen | 3.86-3.97 % |
| Appearance | Clear liquid |
| Assay | 74.0-76.0 % |
| Color | 30 Pt-Co / APHA max. |
| Hydroperoxides as CHP | max. 0.15 % |
| Inorganic + organic hydrolysable chloride | max. 150 mg/kg |

Characteristics

| | |
|-------------------|-------------------------|
| Density, -10 °C | 0.962 g/cm ³ |
| Viscosity, -10 °C | 74.6 mPa.s |

Applications

Polymerization of ethylene: Trigonox® 99-C75 is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range. Polymerization of vinyl chloride: Trigonox® 99-C75 is used as an initiator for the suspension and mass polymerization of vinyl chloride between 40°C and 65°C. Trigonox® 99-C75 is often combined with less active peroxides such as peroxydicarbonates (e.g. Perkadox 16) or diacylperoxides (e.g. Laurox) to increase reactor efficiency.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Trigonox® 99-C75 in chlorobenzene:

| | |
|----------------|-----------------------------|
| 0.1 hr | 75°C (167°F) |
| 1 hr | 56°C (133°F) |
| 10 hr | 38°C (100°F) |
| Formula 1 | $k_d = A \cdot e^{-E_a/RT}$ |
| Formula 2 | $t_{1/2} = (\ln 2)/k_d$ |
| E _a | 114.59 kJ/mole |
| A | 3.12E+14 s ⁻¹ |
| R | 8.3142 J/mole·K |
| T | (273.15+°C) K |

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

| | |
|---|--|
| SADT | 10°C (50°F) |
| Emergency temperature (T _e) | 0°C (32°F) |
| Control temperature (T _c) | -10°C (14°F) |
| Method | The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva). |

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

| | |
|---------------------|--|
| T _s Max. | -20°C (-4°F) |
| Note | When stored under these recommended storage conditions, Trigonox® 99-C75 will remain within the Nouryon specifications for a period of at least three months after delivery. |

Packaging and transport

In North America Trigonox® 99-C75 is packed in non-returnable, one gallon polyethylene containers of 7 lb net weight (4 per case) and in five gallon polyethylene containers of 35 lb net weight. In other regions the standard packaging is a 30-liter HDPE can (Nourytainer®) for 25 kg peroxide solution. Both packaging and transport meet the international regulations. For the availability of other packed quantities consult your Nouryon representative. Trigonox® 99-C75 is classified as Organic peroxide type D; liquid, temperature controlled; Division 5.2; UN 3115.

Safety and handling

Keep containers tightly closed. Store and handle Trigonox® 99-C75 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e.g. amines), acids, alkalis and heavy metal compounds (e.g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Trigonox® 99-C75. This information should be thoroughly reviewed prior to acceptance of this product. The MSDS is available at nouryon.com/sds-search.

Major decomposition products

Carbon dioxide, 2-Phenylisopropanol, Isomers of neonane

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox®, Nourytainer, Perkadox and Laurox are registered trademarks of Nouryon Functional Chemicals B.V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

The logo for Nouryon, featuring a stylized blue 'N' followed by the word 'ouryon' in a blue sans-serif font.