


Trigonox TAHP-W85

tert-Amyl hydroperoxide, 85% solution in water

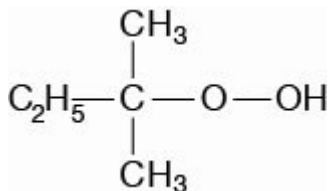

Trigonox TAHP-W85 is an initiator (85% active ingredient in water) for (co)polymerization of styrene.

CAS number	3425-61-4	EINECS/ELINCS No.	222-321-7
TSCA status	listed on inventory	Molecular weight	104.1
Active oxygen content peroxide	15.36%	Concentration	12.30-13.06%

Specifications

Appearance	Clear to slightly hazy liquid
Appearance, 25-30°C	Clear to slightly hazy liquid
Assay	80.0-85.0 %

Characteristics

Density, 20 °C	0.910 g/cm ³
----------------	-------------------------

Applications

Trigonox TAHP-W85 can be used as initiator for the solution (co)polymerization of styrene, acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Trigonox TAHP-W85 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 228°C
1 hr	at 190°C
10 hr	at 153°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	80°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max.	30°C
Ts Min.	-5°C
Note	When stored according to these recommended storage conditions, Trigonox TAHP-W85 will remain within the Nouryon specifications for a period of at least 3 months after delivery.

Packaging and transport

The standard packaging is a 30-liter HDPE can (Nourytainer) for 25 kg peroxide solution or in polyethylene drums of 400 lb net weight. Delivery in a 2200 lbs net composite Intermediate Bulk Container is also possible in North America. Both packaging and transport meet the international regulations. For the availability of other packed quantities consult your Nouryon representative. Trigonox TAHP-W85 is classified as Organic peroxide type F; liquid, Division 5. 2; UN 3109.

Safety and handling

Keep containers tightly closed. Store and handle Trigonox TAHP-W85 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Trigonox TAHP-W85. This information should be thoroughly reviewed prior to acceptance of this product. The SDS is available at nouryon.com/sds-search.

Major decomposition products

Methane, tert-Amyl alcohol, Ethane, Propane

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox is a registered trademark of Nouryon Functional Chemicals B.V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

